


LevelPro® - LP75 Series

Thru-Point Connector

Durability, Safety and Protection


The **LP75 Series Thru-Point Connector** boasts exceptional chemical resistance, ensuring durability and reliability even in harsh environments. Featuring VaporBloc technology, it effectively blocks vapor emissions from the tank, minimize environmental impact and enhancing safety. The 2" NPT connection has been designed specifically for tanks, it offers a secure and efficient solution for fluid transfer and containment systems.

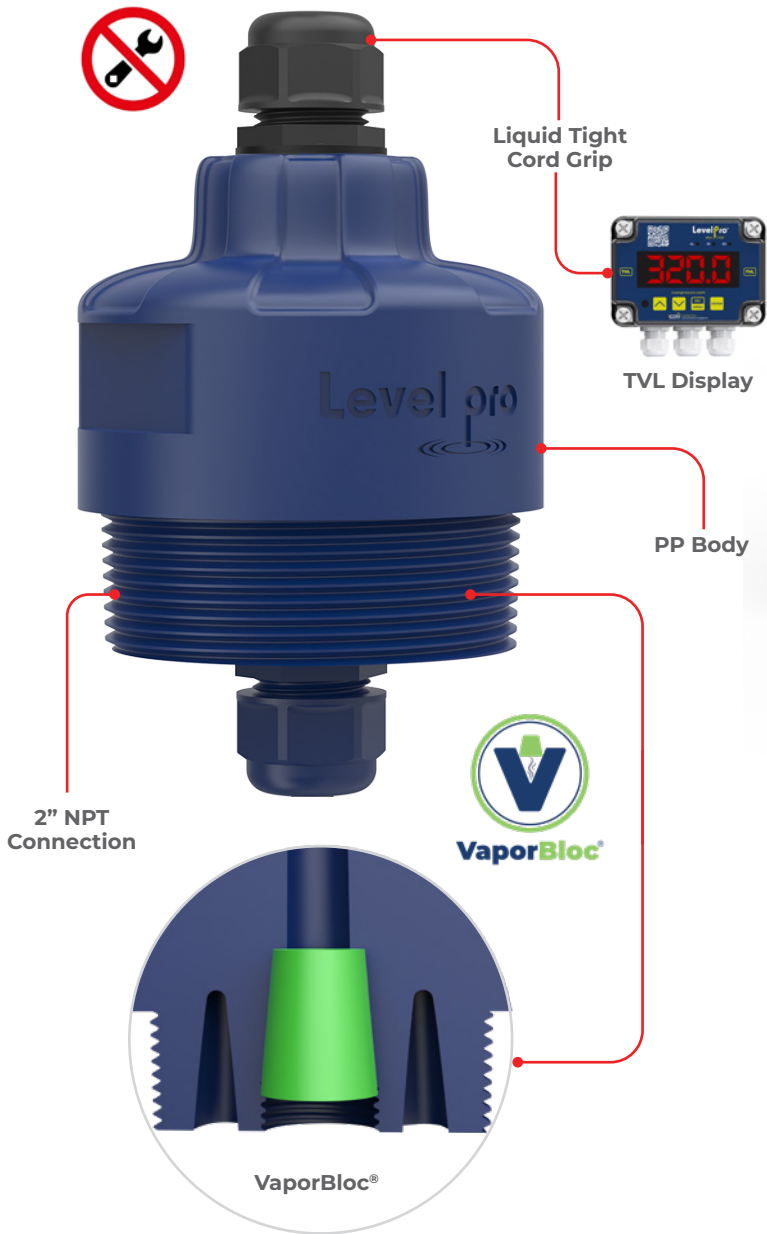

- ✓ Blocks Out Corrosive Chemical Fumes
- ✓ Pressure Tested to 75 psi
- ✓ Protects Environment from Fumes

Features


- ✓ 2" NPT Connection
- ✓ Excellent Chemical Resistance
- ✓ VaporBloc® Technology

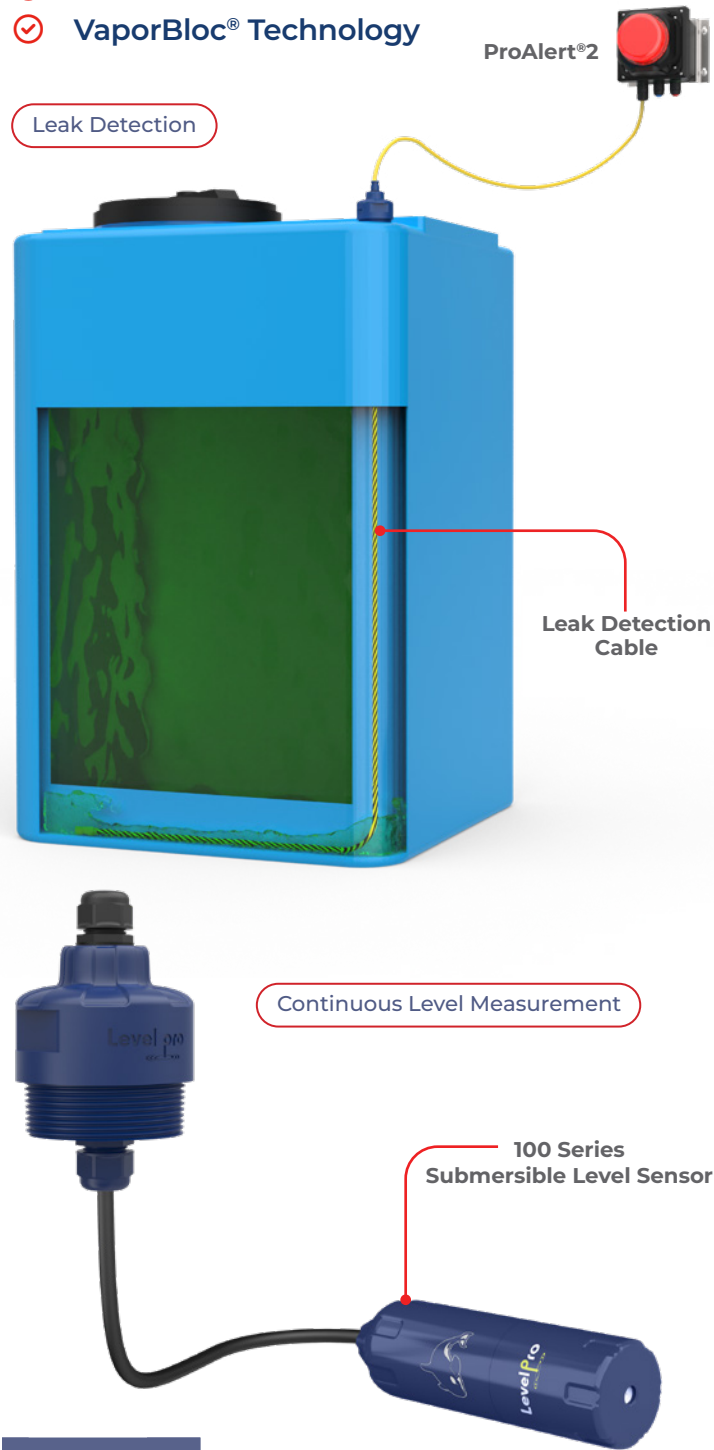


Features

LP75 Thru-Point Connector		
Size	Part Number	Material
2"	LP75-PP	PP Cable Grip




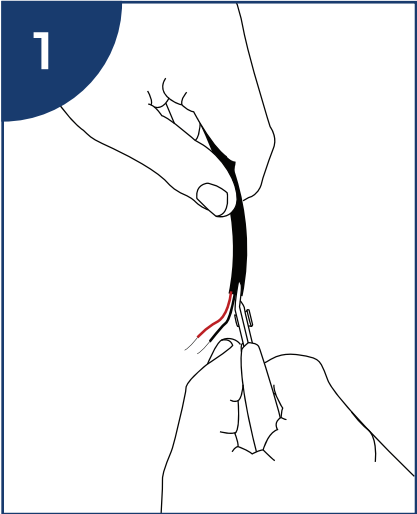



Cut cable to length

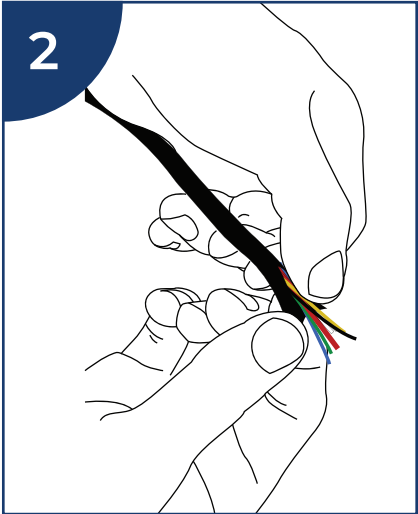



Slice and peel back Teflon® Jacket

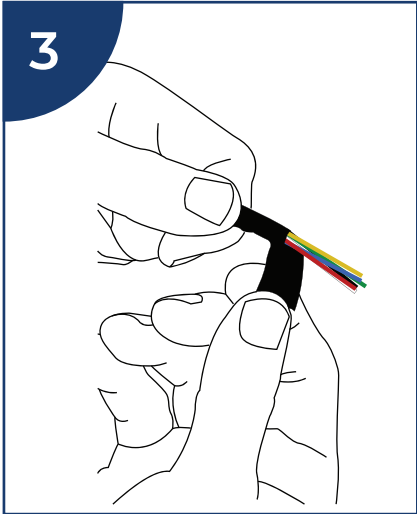


Cut the Teflon® Jacket

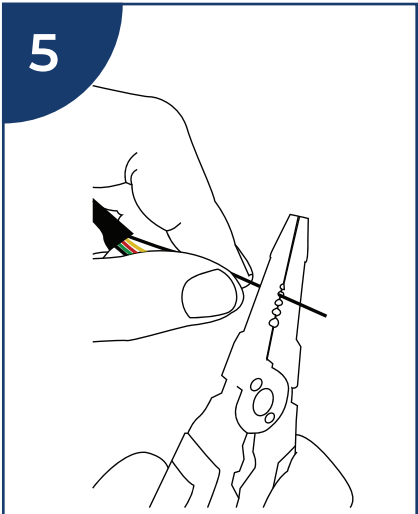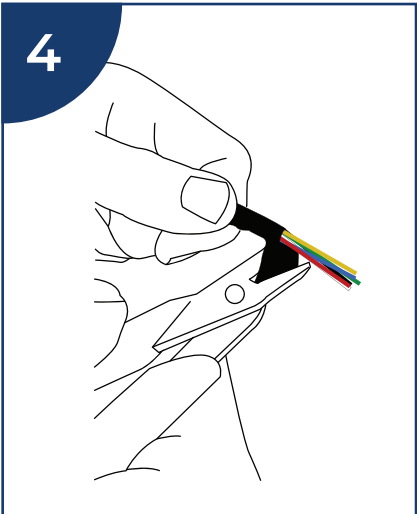


Expose the wire on the black cable

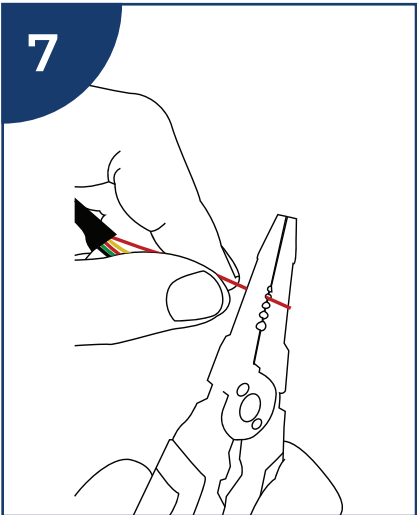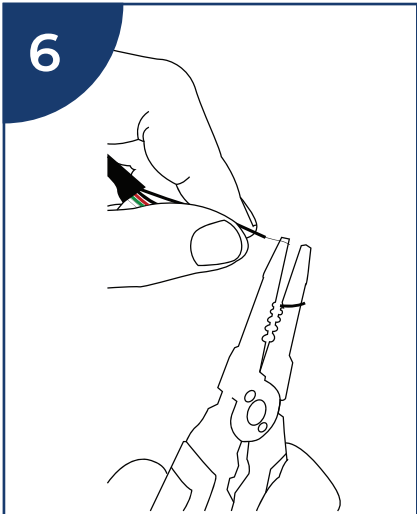


Expose the wire on the red cable

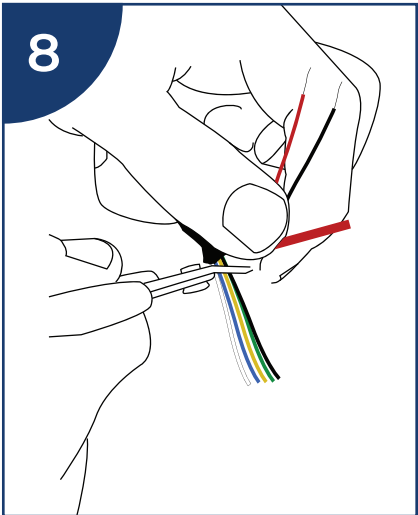


Cut off the remaining coloured wires

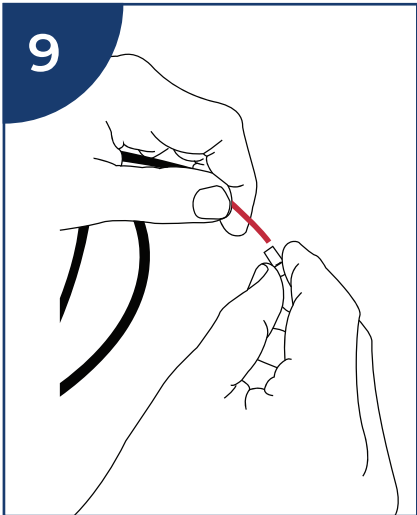







Take the filter off of the capillary tube after the cable is cut

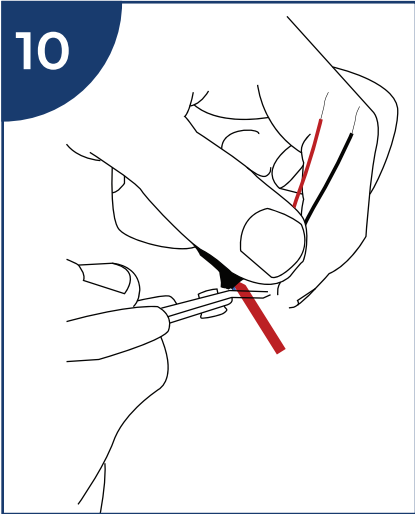

Cut the capillary tube on an angle



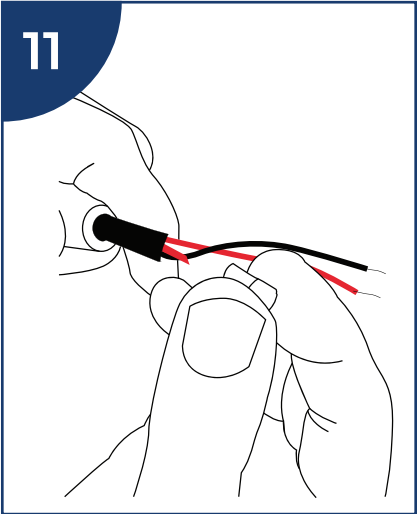


Put the filter back on the capillary tube after cut

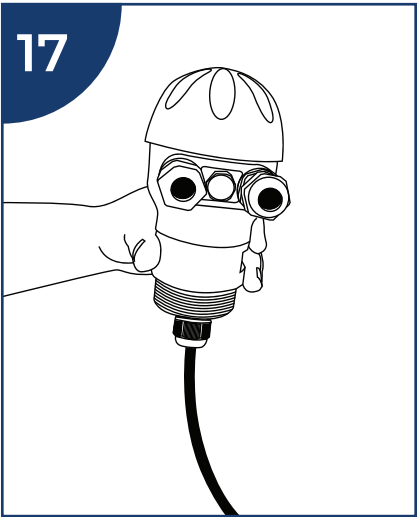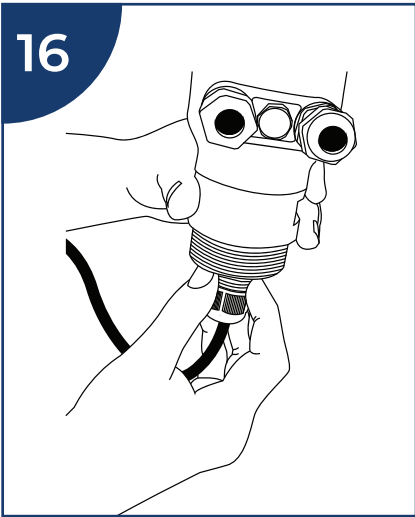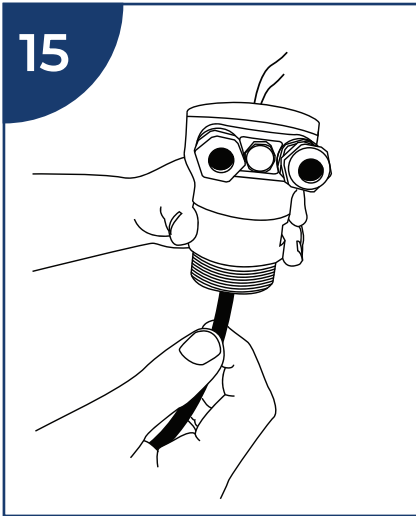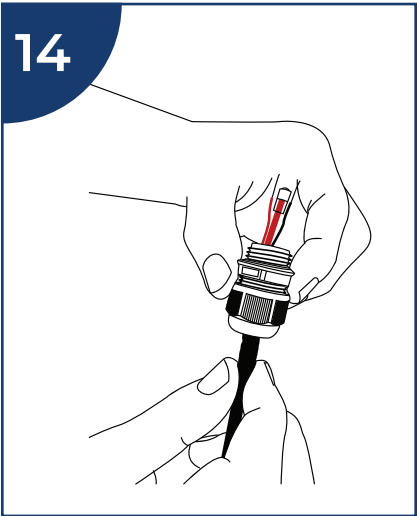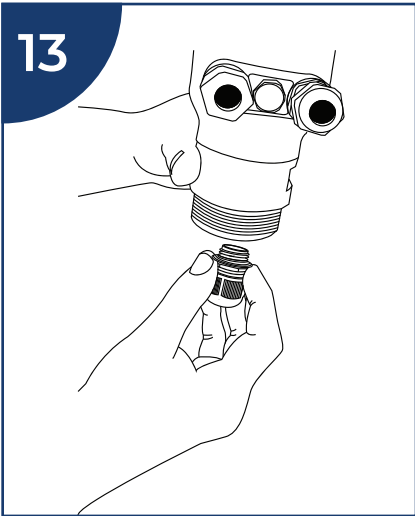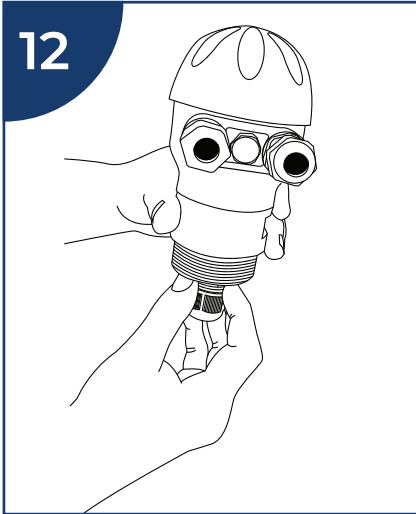


LevelPro® - LP75 Series


Thru-Point Connector

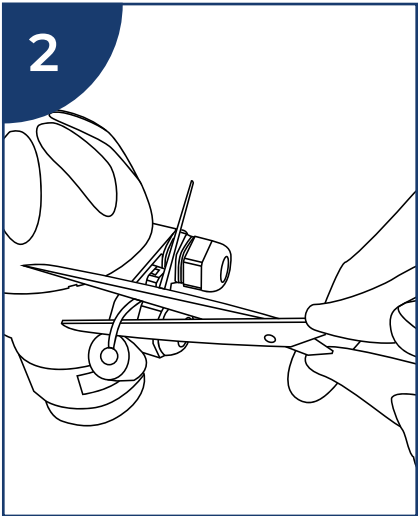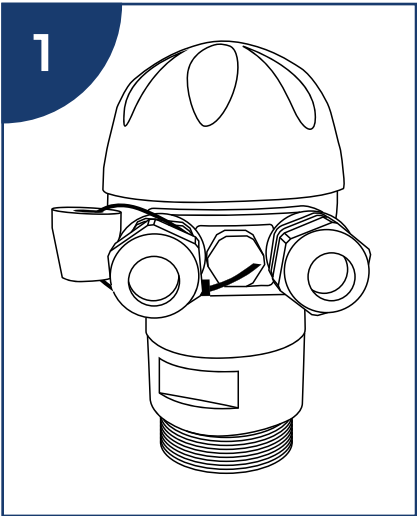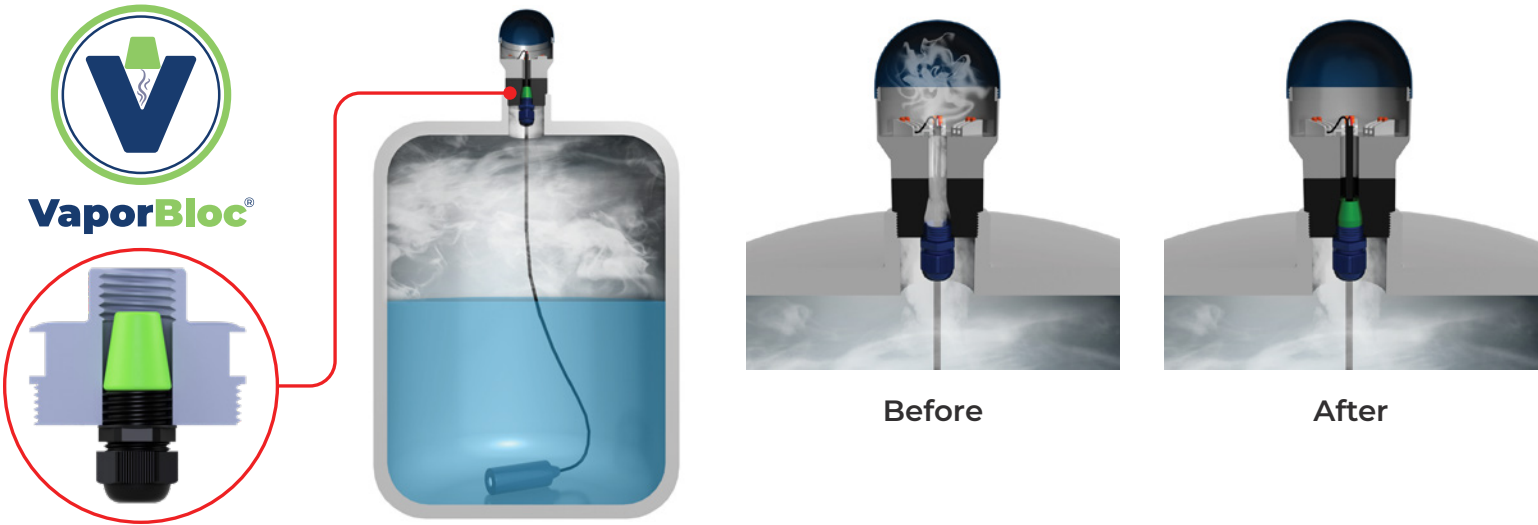


Cut the zip tie to retrieve VaporBloc®

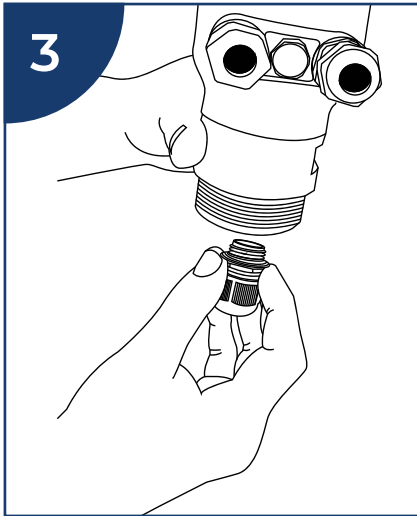


Unscrew bottom cord grip

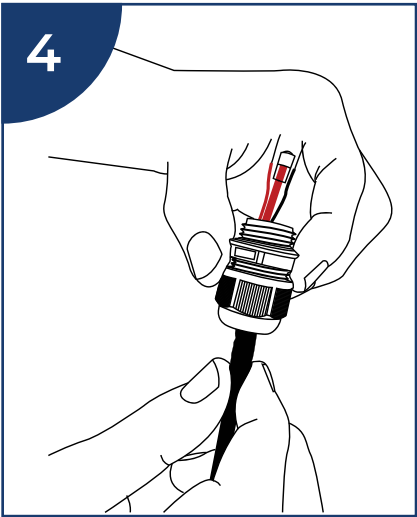


Thread wire through cord grip

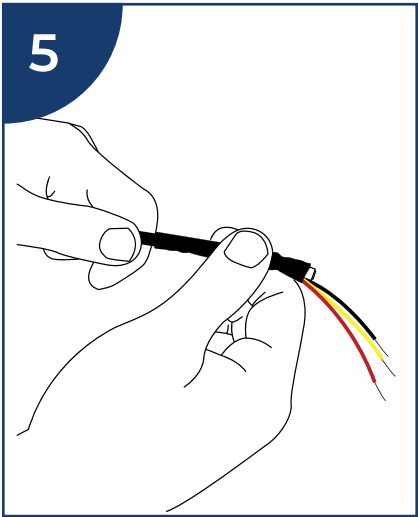


Remove heat shrink

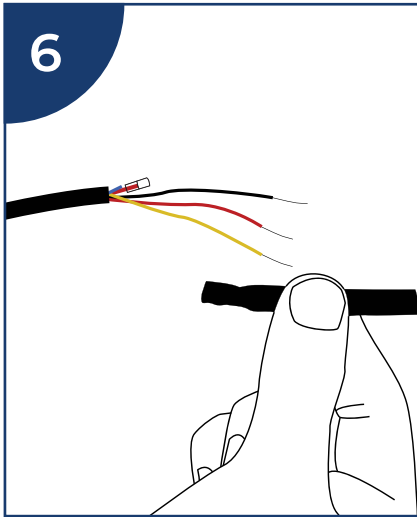



Discard heat shrink

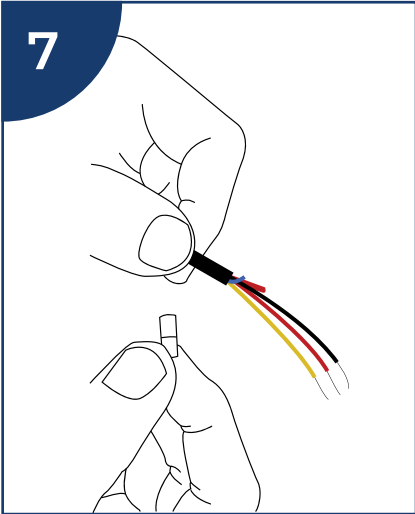


Remove filter from vent tube

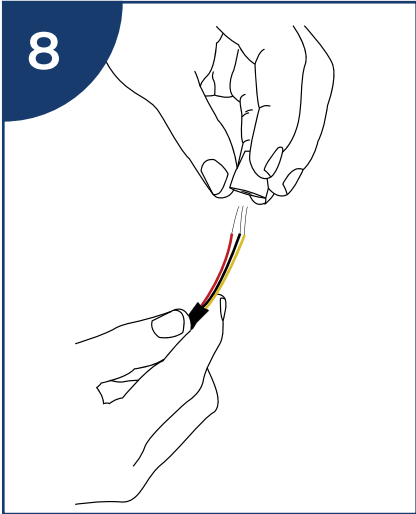


Thread wire through VaporBloc®

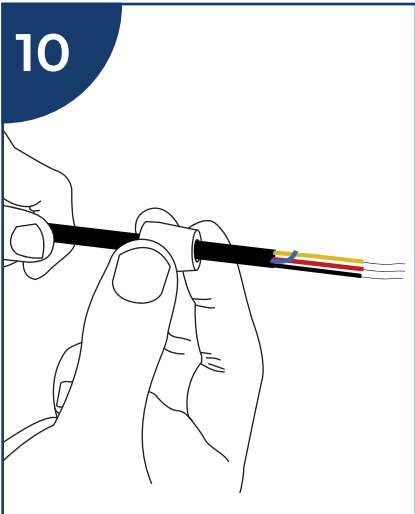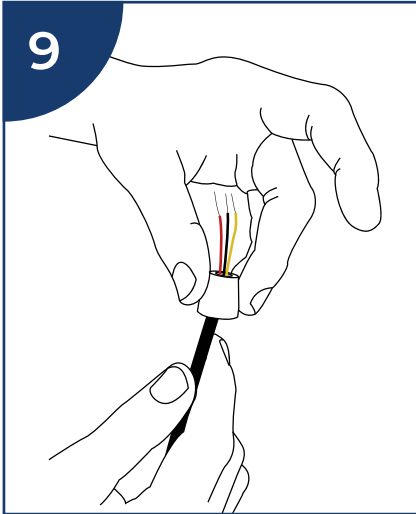


Ensure VaporBloc® has a snug fit around wire

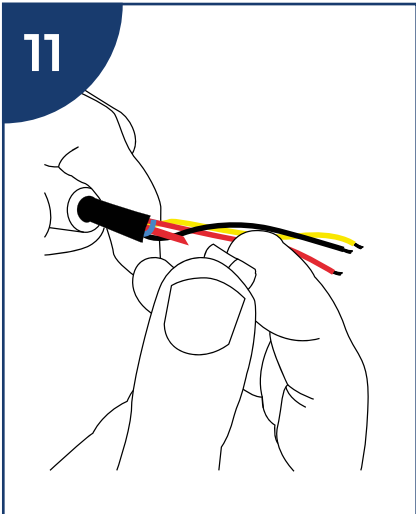


Place filter back on vent tube

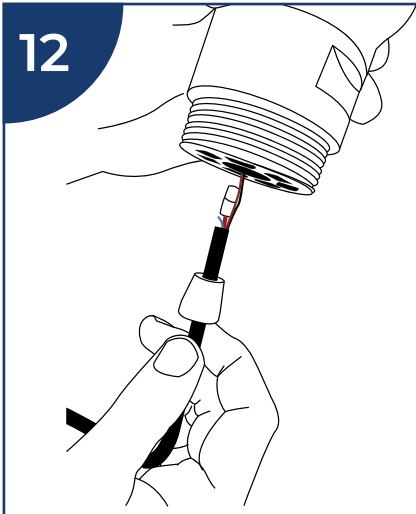


Thread wire up through bottom of junction box

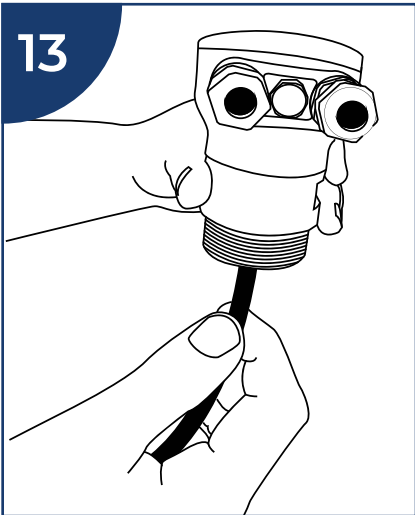

Ensure VaporBloc® is fully inserted

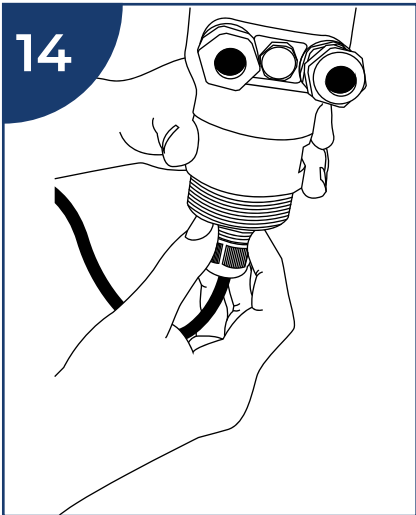

Screw bottom cord grip back on junction box

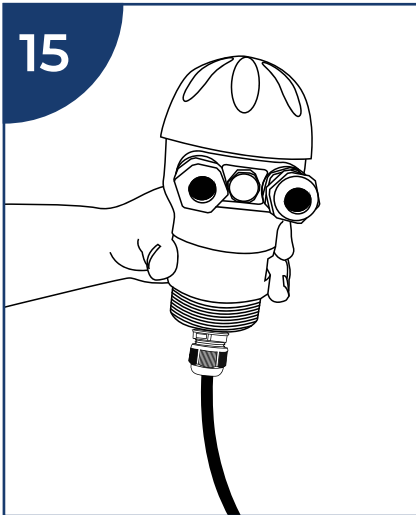

VaporBloc® installed successfully!